

Musical Instruments
AIR SWAB[®]



USER MANUAL

SILVERSTEIN
WORKS

SAFETY INSTRUCTIONS

 
Fully charge before initial use!

- Avoid using with wet hands.
- Avoid device from water and humidity
- Ensure the air inlet and blower are unobstructed during operation.
- Do not insert foreign objects into air vents or air intakes.
- Avoid direct eye contact with LED light.
- Keep away from heat sources such as stoves, heaters, or hot car interiors.
- Do not use near flammable substances like LPG, paint thinners, or sprays; this could lead to explosions or fires.
- Avoid drops or collisions, which could cause damage or malfunction.
- Avoid pulling, twisting, squeezing, or modifying the charging cable. Discontinue use if the cable is damaged.
- If you notice unusual sounds, smells, high temperatures, or abnormal fan operation, stop using the product immediately.
- Do not attempt to disassemble the product.
- Keep hair away from the either side of the air openings.
- Store in a well-ventilated, dry place, away from direct sunlight. Keep within range of -20°C to 60°C.
- Avoid blowing air directly into the eyes, ears, mouth, or other sensitive areas.
- Store the product out of reach of children and pets.
- Do not leave the product unattended during use.
- Avoid using the product in humid or splashing environments, such as near bathtubs, showers, or sinks.
- The battery in this product is recyclable. Dispose of it through a professional recycling service.




- ①: Air inlet (Swab nozzle mounting point)
- ②: Air outlet (Vacuum nozzle mounting point)
- ③: Power button
- ④: LED indicator
- ⑤: Speed control slider
- ⑥: Charging port
- ⑦: Thermal vents
- ⑧: Swab Nozzle for Woodwind and Brasswind instrument.

POWER ON / OFF

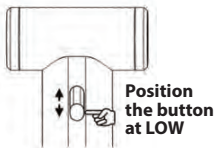

SPEED CONTROL

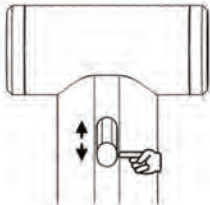 


HIGH: 130,000 RPM



LOW: 0 RPM

 LED

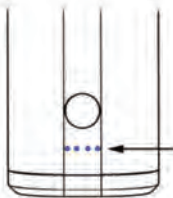

LED On: Power On

LED Flashing: Low Battery

LED Running: Charging

LED On : Charged

Recommended Charger Specifications: 5V/2A

HOW TO USE

For Clarinet, Do not remove the barrel

For Saxophone; Do not remove the neck

For Trumpet and Trombone, blow air through the bell side.

- Before using AIRSWAB®, allow any excess moisture to drain from your instrument.
- Ensure the SPEED CONTROL switch is set to the LOW position.
- For Clarinet, Oboe and Soprano saxophone and any other Instrument with vertical bell, position your instrument firmly on flat surface so that the bell is covered. For other instruments like Alto and Tenor saxophone, cover cover the bell to minimize air leakages.
- Position the AIRSWAB® at the inlet point, such as the barrel, neck, or mouthpiece.
- Hold the instrument securely and carefully turn on AIRSWAB®.
- Slide the Speed Control Switch to HIGH and let it run for **15 ~ 20 seconds**. For larger instruments, leave it on for **20 ~ 30 seconds**.
- Afterward, slide the Speed Control Switch back to LOW.
- Check if your instrument requires additional cleaning. If necessary, adjust the air speed to less than **50%** and clean the inside or outside of your instrument as needed.

Model: ASW01CG

Motor Speed: 130,000 R.P.M.

Air Speed: ~55m/sec.

Working Temp.: 0°C~+60°C

Storage Temp.: -20°C~+60°C

Size & Weight: 36*65*126mm / 298g (without nozzle)

Battery Capacity: 2500mAh*2

Charging Time: ~3h

Charging : TYPE -C cable

Operating Voltage: 6~8.4V

WARRANTY

To qualify for the 1-year limited warranty, register using the QR code below within 30 days of purchase.

The warranty's terms and conditions will be provided during registration, and you will need to upload a copy of your receipt.

This limited warranty does not cover the following:

- Damage caused by unauthorized disassembly, modification, or unauthorized repairs.
- Malfunction resulting from accidental drops.
- Failures due to improper use or failure to follow the instructions in the manual.



Distributed by:

Silverstein Works

+1 201 471 0700

www.silversteinworks.com

Designed by:

Creative Generation

+1 201 488 7770

www.cregene.com